

Specific additional steps for the F75 only

STEP BY STEP

STEP 1: THE ORIGINAL FILTER BARREL MUST BE REPLACED

1




Remove the original filter barrel

2



Unscrew the internal filter from the original barrel

3

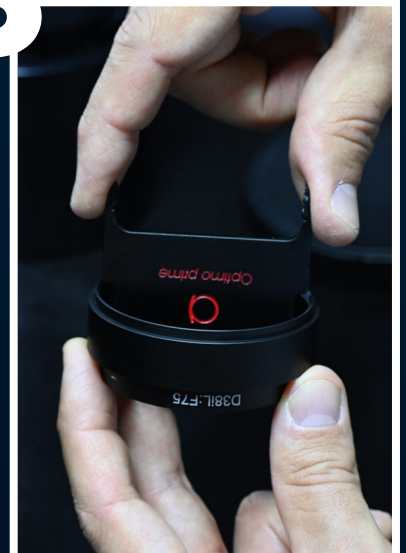

Screw-in the internal filter onto the **new barrel**

4



Replace the original iris with the new Angénieux oval iris

5



Install the new barrel with the internal filter

STEP 2 : REPLACE THE ORIGINAL FOCUS MECHANISM END-STOP

1



locate your focus ring position by adding a mark with a pencil

2



untighten slightly the focus ring screws one by one (without removing the screws)

3



extract the focus ring and locate the existing end-stop (go to infinity position)

4




unmount the original black end-stop

5



align the two screw holes in the center of the focus body opening

6

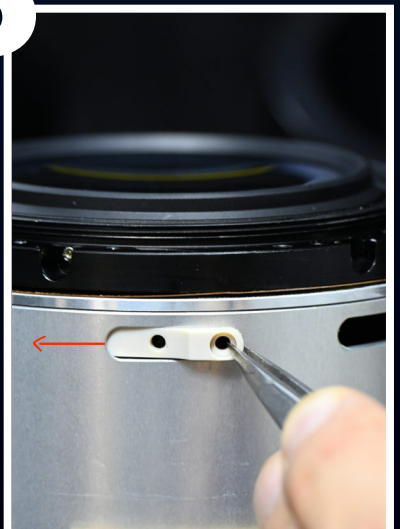

slide-in the new focus end-stop in position

STEP 2 : REPLACE THE ORIGINAL FOCUS MECHANISM END-STOP

7



tighten the new focus end-stop using the original screws

8



reinstall the focus ring by aligning it with your previous location marks

9



please note that the Minimum of distance will be slightly limited (2" is no longer reachable)

ET VOILA !

Before diving into the Angénieux Oval Iris installation protocol, please ensure to be fully comfortable with the IOP procedure. For further information please refer to the IOP User Manual.

