


OPTIMO ULTRA COMPACT ZOOMS

0.75x WA ADAPTER PROCEDURE

1

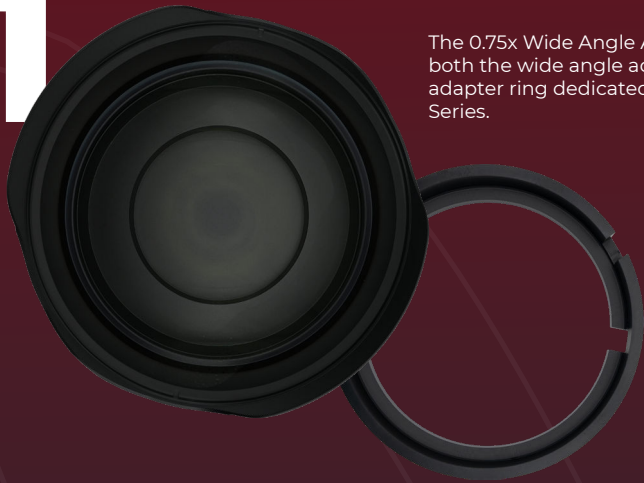

The 0.75x Wide Angle Adapter kit contains both the wide angle adapter and an additional adapter ring dedicated to the Optimo Prime Series.

The additional adapter ring won't be needed for zooms. The 0.75x Wide Angle Adapter is already in 114 mm diameter.

2



Install the 0.75x Wide Angle Adapter on the Optimo Ultra Compact zoom ensuring the red index marks are aligned with the vertical axis of the lens.


YOU'RE ALL SET!



BE AWARE THAT THE OPTIMO ULTRA COMPACT INITIAL FOCUS RANGE FUNCTION WILL BE REDUCED BY 4 WHEN USING THE 0,75X WIDE ANGLE ADAPTER.

NEW DISTANCES

It is important to note that the minimum of distance changes, still operable from the 2', the MOD actually becomes 5' while the infinity shifts from the infinity mark to 2'4".

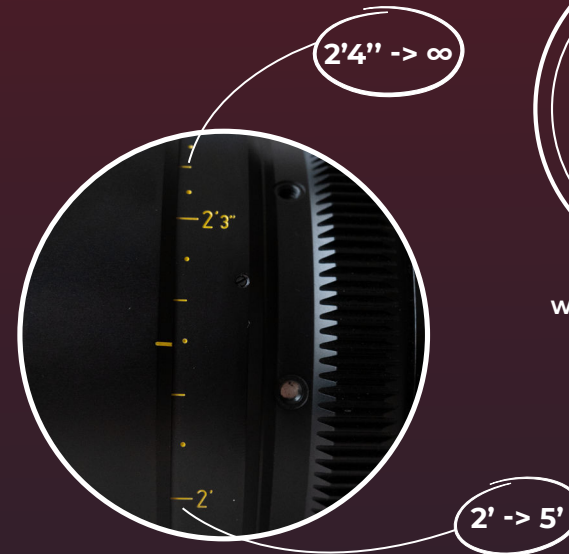

NEW FOCUS OPERATING DISTANCES

FOCUS RANGE

WITH 0.75X WA ADAPTER



WITHOUT 0.75X WA ADAPTER